SONY

2-638-467-**12** (1)

Trinitron Color TV

Operating Instructions GB

- Before operating the unit, please read this manual thoroughly and retain it for future reference.

使用說明書 CT

- 使用本電視機之前請先詳細閱讀此手冊，並妥善保存以備日後用作參考。

FD Trinitron
WEGA

KV-BZ21
KV-BZ14

M50
M40
P40

© 2005 Sony Corporation

WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110 – 240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid leaks from the batteries and touches your skin, immediately wash it away with water.



For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.



To prevent fire or shock hazard, do not expose the TV to rain or moisture.

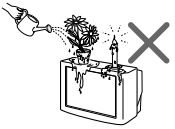

Do not place any objects on the TV. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.



Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.



Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.



Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.



Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

Do not plug in too many appliances to the same power socket. Do not damage the power cord.



Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.



Clean the TV with a dry and soft cloth. Do not use benzine, thinner, or any other chemicals to clean the TV. Do not attach anything (e.g., adhesive tape, cellophane tape, glue) on the painted cabinet of the TV. Do not scratch the picture tube.



Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

Table of Contents

Getting Started **4**
Setting up your TV ("Initial Setup") **5**
TV top control, front and rear panels **7**
Connecting optional components **8**
Using the remote control and basic functions **10**
Introducing the WEGA GATE navigator **12**
"Settings" Adjustment **13**
Changing the "Picture" setting **14**
Changing the "Sound" setting **15**
Changing the "Channel Setup" setting **16**
Changing the "Setup" setting **18**
Troubleshooting **19**
Specifications ..... **Back cover**

GB

■ Getting Started

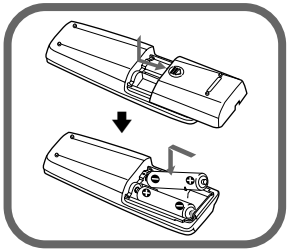

Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old or different types of batteries together.

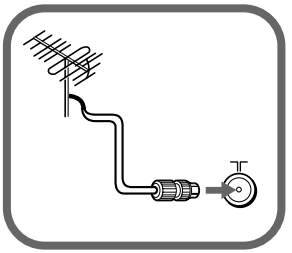

Step 2

Connect the antenna cable (not supplied) to ⅂ (antenna input) at the rear of the TV.

Tip

- You can also connect your TV to other optional components (see page 8).

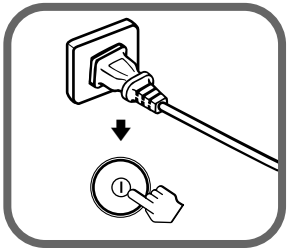

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

Note

- The ⏻ (standby) indicator flashes green for a few seconds when turning on the TV. This does not indicate a malfunction.

Step 4

Set up the TV by following the instructions of the “Initial Setup” menu (see page 5).

■ Setting up your TV (“Initial Setup”)

When you turn on your TV for the first time, the “Initial Setup” menu will appear. You may change the menu language, preset the TV channels automatically and sort or edit the channels using the buttons on the remote control or TV top control panel.

1 Press ↑ or ↓ to select the desired menu language, then press ⊕.

The selected menu language appears.

2 Press ↑ or ↓ to select “Yes”, then press ⊕ to preset the channels automatically.

The screen will indicate automatic presetting is in progress (“TV system” is available for KV-BZ21M50/BZ21M40/BZ14M40 only).

After all available channels have been tuned and stored, the “Program Sorting/Edit” menu appears automatically on the screen.

To skip automatic channel presetting, select “No”, then press ⊕.

If the message “No channel found. Please connect cable/antenna” appears, check your TV connections, then press ⊕.

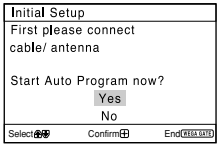

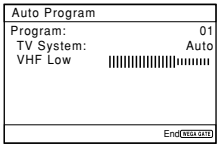

3 The “Program Sorting/Edit” menu enables you to sort and edit the channels.

a) If you wish to keep the channels in the current condition, press WEGA GATE to exit.

b) Press ↑ or ↓ to select the program number with the channel you wish to change. The selected channel will appear on the screen.

c) If you wish to store the channels in a different order:

1) Press → to enter sorting mode.

2) Press ↑ or ↓ to select the new program number position for your selected channel, then press ←.

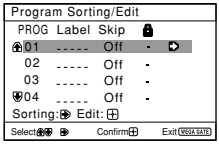

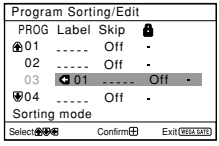

continue

d) If you wish to edit the channels, press ⊕ to change to edit mode.
Press → until the mode that you wish to edit is highlighted: Label, Skip, 🔒 (block symbol). Then press ⊕.

1) To label, press ↑ or ↓ to select the alphanumeric characters for the label. Then press ⊕.
2) To skip the program number, press ↑ or ↓ to select "On". Then press ⊕.

   You can skip this program number when using PROG +/-.
3) To block unwanted program number, press ↑ or ↓ to select 🔒. Then press ⊕.

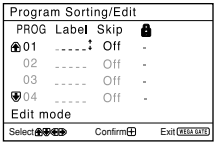

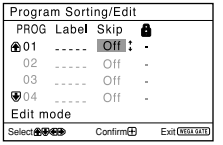

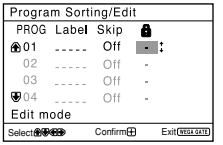

e) Repeat step b) to d) if you wish to change other channels.

Press WEGA GATE to go to the next menu.

---

4 To prevent this "Initial Setup" menu from appearing again when you turn on the TV by pressing ⏻, press ↑ or ↓ to select "No", then press ⊕.

To allow this menu to appear again, select "Yes", then press ⊕.

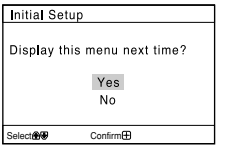

Tip

- You can immediately go to the end of the "Initial Setup" menu by pressing WEGA GATE.

■ TV top control, front and rear panels

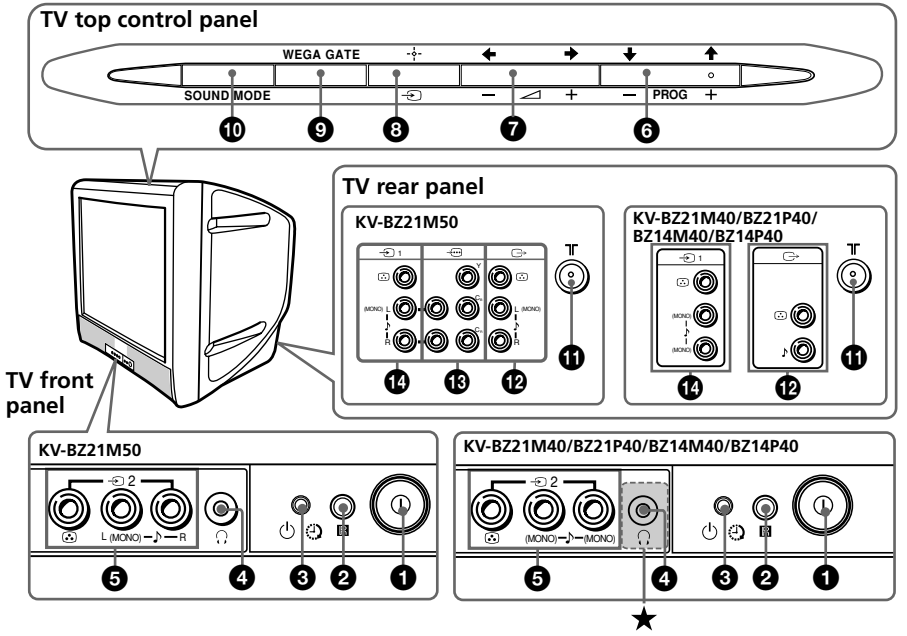

Button/Terminal	Function	Page
❶ ⏻	Turn off or turn on the TV.	4
❷	Remote control sensor.	-
❸	Wake Up indicator.	11
❸	Standby indicator.	4
❹	Headphone jack.	-
❺ 2	Video input terminal 2.	8
❻ PROG +/–	Select program number.	-
❼ +/–	Adjust volume.	-
❽	Select TV or video input.	8
WEGA GATE menu operations		
❻,❼ ↑,↓,←,→	Select and adjust items.	12
❽	Confirm selected items.	12
❾ WEGA GATE	Display or cancel WEGA GATE menu.	12
❿ SOUND MODE (KV-BZ21M50 only)	Select sound mode options with a 5-Band Graphic Equalizer display.	10
⓫	Antenna input terminal.	8
⓬	Monitor output terminal.	8
⓭	Component video input terminal.	9
⓮ 1	Video input terminal 1.	8

★ The earphone jack will be labeled as ⏀ for KV-BZ14 only.

■ Connecting optional components

Connecting to the video input terminal (⇨)

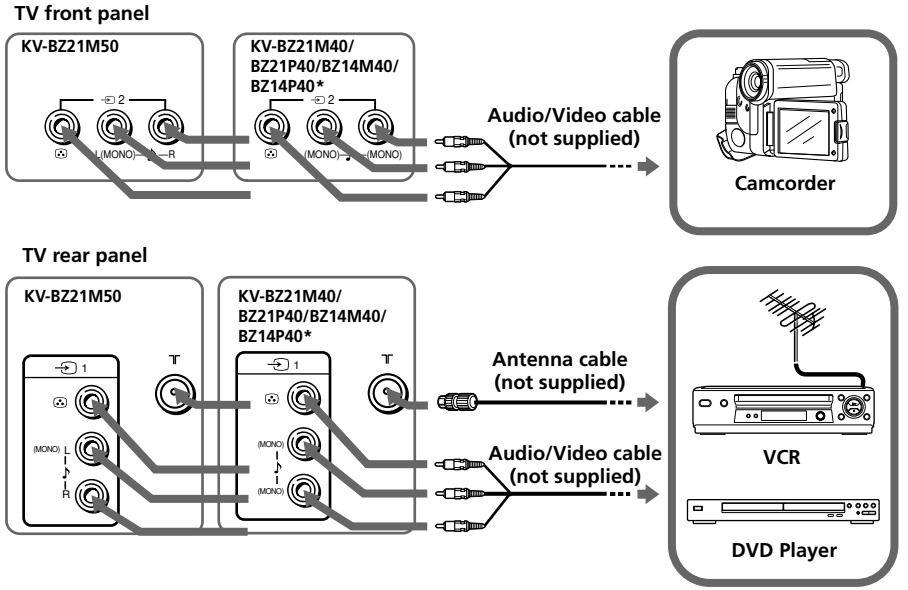

* Sound Mix Terminal (KV-BZ21M40/BZ21P40/BZ14M40/BZ14P40 only)

You can connect the audio L and R jacks from your AV equipment to both ♪ (MONO) jacks on the TV to enjoy mixed left and right sound. If you do not prefer the mixed sound, disconnect either one of the ♪ (MONO) jacks.

Note

- If you connect a VCR to ⊤ (antenna input), preset the signal output from the VCR to the program number 0 on the TV (see page 17).

Connecting to the monitor output terminal (⇦)

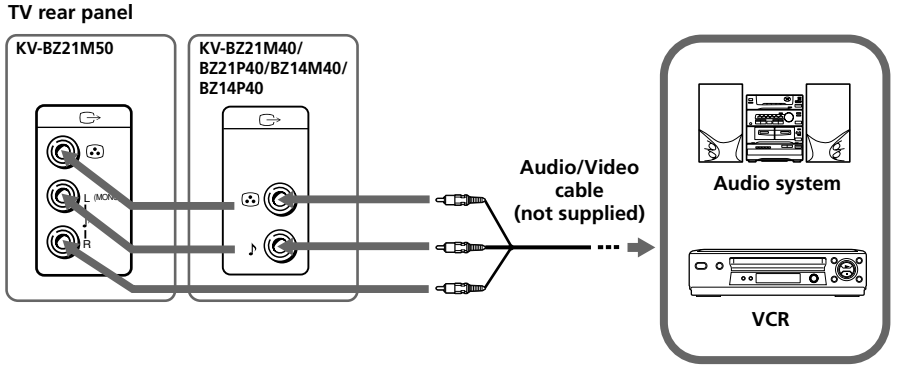

Connecting to the component video input terminal ( )

▶ KV-BZ21M50 only

TV rear panel

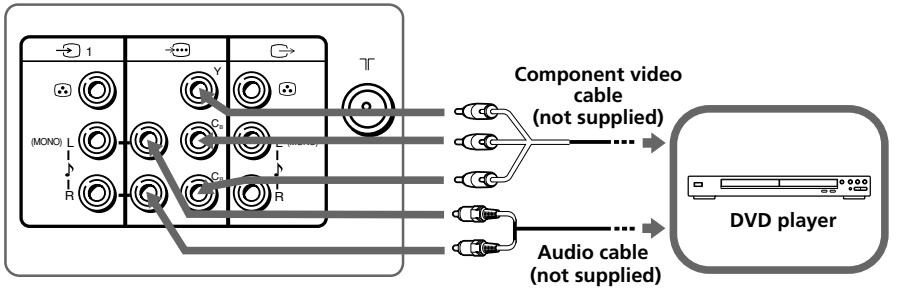

Notes

- If your DVD player can output interlace and progressive mode signals, select the interlace output when connecting to (component video input) on your TV. Your TV can receive either 525i/60Hz or 625i/50Hz interlace signals.
- The component video terminals on your DVD player are sometimes labeled Y/C_B/C_R, Y/P_B/P_R, Y/C_b/C_r or Y/B-Y/R-Y.
- If you select "DVD" on your TV screen, the signal from the (monitor output) jacks will not be output properly. This does not indicate a malfunction.

■ Using the remote control and basic functions

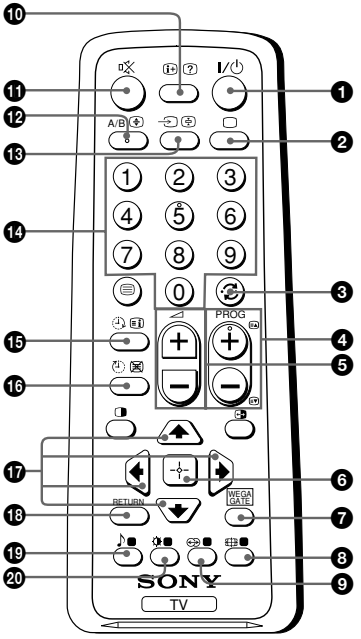

Button	Description	Page
❶ I/⏻	Turn off temporarily or turn on the TV.	–
❷ ▭	Display the TV program.	–
❸ ↻	Jump to last program number that has been watched for at least five seconds.	–
❹ PROG +/–	Select program number.	–
❺ ◿ +/–	Adjust volume.	–
❽ ▦	Not function for your TV.	–
❾ (KV-BZ21M50 only)	Select surround mode options: “On”, “Simulated”, “Off”.	15
❿ i+	Display on-screen information.	–
⓫ 🔇	Mute the sound.	–
⓭ →	Select TV or video input.	8
⓮ 0 – 9	Input numbers.	–
⓳ ♪ (KV-BZ21M50 only)	Select sound mode options with a 5-Band Graphic Equalizer display: “Dynamic”, “Standard”, “Custom”*. * When the “Custom” mode is selected, you can receive the last adjusted sound settings from the “Sound Adjustment” option in the menu.	15
⓴ ☼	Select picture mode options: “Vivid”, “Standard”, “Custom”*. * When the “Custom” mode is selected, you can receive the last adjusted picture settings from the “Picture Adjustment” option in the menu.	14

Button	Description	Page
WEGA GATE menu operations		
❻ ⊹	Confirm selected items.	12
❼ WEGA GATE	Display or cancel WEGA GATE menu.	
⓱ ↑, ↓, ←, →	Select and adjust items.	
⓲ RETURN	Return to the previous level.	
Timer operations		
⓯ (Wake Up Timer)	Set TV to turn on automatically according to the desired period of time (max. of 12 hours). The indicator on TV lights up amber once you set the wake up timer. If no buttons or controls are pressed for more than one hour after the TV is turned on using the wake up timer, the TV automatically goes into standby mode.	–
⓰ (Sleep Timer)	Set TV to turn off automatically according to the desired period of time (max. of one hour and 30 min.).	–
Teletext operations (green label)		
, , , , , , , , ■ (red, green, yellow, blue)	Not function for your TV.	–
PIP operations		
, , ↑, ↓, ←, →	Not function for your TV.	–
Stereo/bilingual operations		
⓬ A/B	Not function for your TV.	–

■ Introducing the WEGA GATE navigator

WEGA GATE is a gateway that allows you to access to preset TV channels, connected external inputs and "Settings" menu.

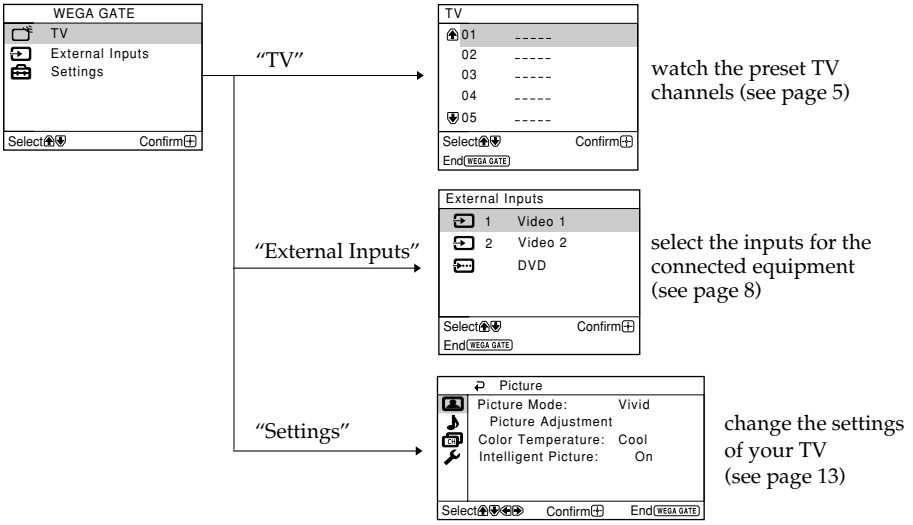

How to use WEGA GATE

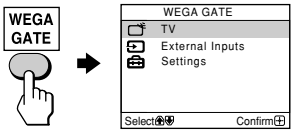

(1) Press WEGA GATE to display or cancel the WEGA GATE menu.

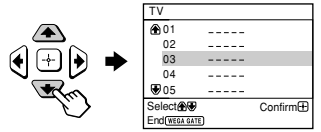

(3) Press ↑ or ↓ to select the desired item.

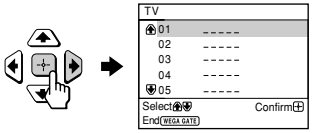

(2) Press ⊕ (or →) to confirm your selection or go to the next level.

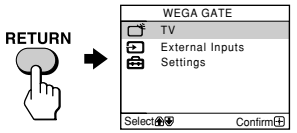

(4) Press RETURN to move to the previous level.

Tip

- The WEGA GATE, ⊕ and ↑,↓,←,→ buttons on the top control panel can also be used for the operations above.

■ "Settings" Adjustment

You are able to change the settings of your TV from "Settings" in WEGA GATE menu.
Press WEGA GATE button to display WEGA GATE menu. Press ↑ or ↓ to select "Settings" and press ⊕.

The following is an overview of the items that can be adjusted.

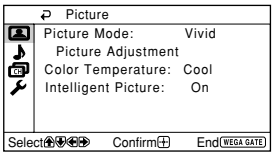

"Picture" (see page 14)

"Picture Mode": "Vivid" → "Standard" → "Custom"
"Picture Adjustment": "Picture", "Brightness", "Color", "Hue", "Sharpness", "Reset"
"Color Temparature": "Cool" → "Neutral" → "Warm"
"Intelligent Picture": "On" → "Off"

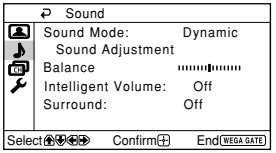

"Sound" (see page 15)

"Sound Mode": "Dynamic" → "Standard" → "Custom" (KV-BZ21M50 only)
"Sound Adjustment": "Adjust", "Reset" (KV-BZ21M50 only)
"Balance" (KV-BZ21M50 only)
"Intelligent Volume": "On" → "Off"
"Surround": "On" → "Simulated" → "Off" (KV-BZ21M50 only)

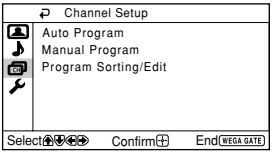

"Channel Setup" (see page 16)

"Auto Program"
"Manual Program"
"Program": "00" - "99"
"TV System": "B/G" → "I" → "D/K" → "M" (KV-BZ21M50/BZ21M40/BZ14M40 only)
"VHF Low"/"VHF High"/"UHF"
"Fine": "Auto" → "Manual"
"Signal Booster": "Auto" → "Off"
"Program Sorting/Edit"

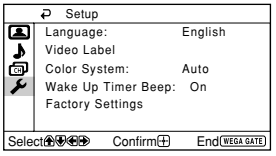

"Setup" (see page 18)

"Language": "English" → "中文" (Chinese)
"Video Label": "Video Input", "Label"
"Color System": "Auto" → "PAL" → "SECAM"* → "NTSC3.58" → "NTSC4.43"
"Wake Up Timer Beep": "On" → "Off" (KV-BZ21M50 only)
"Factory Settings": "Yes" → "No"

* The color system "SECAM" is available for KV-BZ21M50/BZ21M40/BZ14M40 only.

Note

- When a feature is dimmed in the menu, it is not selectable.

■ Changing the “Picture” setting

The “Picture” menu allows you to adjust the picture settings.

1 Press WEGA GATE and select “Settings”.

2 Make sure the “Picture” icon ( ) is selected, then press ⊕.

3 Press ↑ or ↓ to select the desired item (e.g., “Picture Mode”), then press ⊕.

Select	To
“Picture Mode”	choose either “Vivid” (contrast and sharp), “Standard” (normal) or “Custom”*.
“Color Temperature”	adjust white color tint. Choose either “Cool” (blue tint), “Neutral” (neutral tint) or “Warm” (red tint).
“Intelligent Picture”	optimize picture quality. Press ↑ or ↓ to select “On”, then press ⊕. To cancel, select “Off”, then press ⊕.

* You can adjust the setting to your personal preference in the “Picture Adjustment” and “Color Temperature” options only when the “Custom” mode is selected.

Adjusting the “Picture Adjustment” items under “Custom” mode

1 Press ↑ or ↓ to select either “Picture” (contrast), “Brightness”, “Color”, “Hue” (color tones) or “Sharpness”, then press ⊕.

Selecting “Reset” will set your TV to the factory settings.

2 Press ↑,↓,← or → to adjust the setting of your selected item, then press ⊕.

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select “Custom”.

Notes

- “Hue” can be adjusted for the NTSC color system only.
- Reducing “Sharpness” can also reduce picture noise.

■ Changing the “Sound” setting

The “Sound” menu allows you to adjust the sound settings.

1 Press WEGA GATE and select “Settings”.

2 Press ↑ or ↓ to select the “Sound” icon (♪), then press ⊕.

3 Press ↑ or ↓ to select the desired item (e.g., “Sound Mode”), then press ⊕.

Select	To
“Sound Mode” (KV-BZ21M50 only)	choose either “Dynamic” (low and high tones), “Standard” (voice and high tones) or “Custom”*.
“Balance” (KV-BZ21M50 only)	Press ↓ or ← to emphasize the left speaker. Press ↑ or → to emphasize the right speaker.
“Intelligent Volume”	adjust the volume of all program numbers and video inputs automatically. Press ↑ or ↓ to select “On”, then press ⊕. To cancel, select “Off”, then press ⊕.
“Surround” (KV-BZ21M50 only)	choose either “On” (surround), “Simulated” (stereo-like monaural sound) or “Off”.

* You can adjust the setting to your personal preference in the “Sound Adjustment” option only when the “Custom” mode is selected.

Adjusting the “Sound Adjustment” item under “Custom” mode (KV-BZ21M50 only)

The 5-Band Graphic Equalizer feature allows you to adjust sound frequency settings of “Custom” mode in the menu.

1 Make sure that “Adjust” is selected, then press ⊕.

Selecting “Reset” will set your TV to the factory settings.

2 Press ← or → to select the desired sound frequency, then press ↑ or ↓ to adjust the setting and press ⊕.

The adjusted settings will be received when you select “Custom”.

Notes

- Adjusting higher frequency will affect higher pitched sound and adjusting lower frequency will affect lower pitched sound.
- You may display the settings directly using the SOUND MODE button on the top control panel (see page 7) or ♪ button on the remote control (see page 10).

■ Changing the “Channel Setup” setting

The “Channel Setup” menu allows you to preset channels automatically, manually preset channels and sort or edit the channels.

1 Press WEGA GATE and select “Settings”.

2 Press ↑ or ↓ to select the “Channel Setup” icon (CH), then press ⊕.

3 Press ↑ or ↓ to select the desired item (e.g., “Auto Program”), then press ⊕.

Select	To
“Auto Program”	preset channels automatically.
“Manual Program”	manually preset desired channels and channels that cannot be preset automatically (see Presetting channels manually in page 17).
“Program Sorting/Edit”	change the order in which the channels appear on the screen, label the program number, skip the program number and block unwanted programs. (see step 3 of the section “Initial Setup” in page 5).

Notes

- If you preset a blocked program number, that program number will be unblocked automatically.
- If you sort a blocked program, that program will remain blocked.

Presetting channels manually

1 After selecting "Manual Program", select the program number to which you want to preset a channel.

(1) Make sure "Program" is selected, then press ⊕.

(2) Press ↑ or ↓ until the program number you want to preset appears on the menu, then press ⊕.

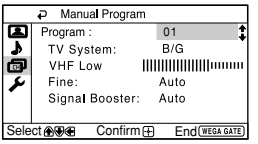

2 Select the desired channel.

(1) Make sure either "VHF Low", "VHF High" or "UHF" is selected, then press ⊕.

(2) Press ↑ or ↓ until the desired channel's broadcast appears on the TV screen, then press ⊕.

3 If the sound of the desired channel is abnormal, select the appropriate TV system (KV-BZ21M50/BZ21M40/BZ14M40 only).

(1) Press ↑ or ↓ to select "TV System", then press ⊕.

(2) Press ↑ or ↓ until the sound becomes normal, then press ⊕.

4 If you are not satisfied with the picture and sound quality, you may be able to improve them by using the "Fine" tuning feature.

(1) Press ↑ or ↓ to select "Fine", then press ⊕.

(2) Press ↑ or ↓ to select "Manual", then press ⊕.

(3) Press ↑,↓,← or → until the picture and sound quality are optimal, then press ⊕.

The + or – icon on the menu flashes while tuning.

5 If the TV signal is too strong (picture distorted; picture with lines; signal interference) or weak (snowy picture), you may be able to improve the picture quality by setting the "Signal Booster" feature.

(1) Press ↑ or ↓ to select "Signal Booster", then press ⊕.

(2) Press ↑ or ↓ to select either "Off" (for picture distorted; picture with lines; signal interference) or "Auto" (for snowy picture), then press ⊕.

■ Changing the “Setup” setting

The “Setup” menu allows you to change the menu language, label the connected equipment, select the color system, set the wake up timer beep and reset your TV to factory settings.

1 Press WEGA GATE and select “Settings”.

2 Press ↑ or ↓ to select the “Setup” icon (🔧), then press ⊕.

3 Press ↑ or ↓ to select the desired item (e.g., “Language”), then press ⊕.

Select	To
“Language”	change the menu language. Press ↑ or ↓ to select either “English” or “中文” (Chinese), then press ⊕.
“Video Label”	label the connected equipment. (1) Select “Video Input” and press ⊕. Press ↑ or ↓ to select the input you want to label, then press ⊕. (2) Select “Label” and press ⊕, then press ↑ or ↓ to select the label options: “Video 1”/“Video 2”/“DVD” (KV-BZ21M50 only), “VCR”, “SAT”, “Game” or “Edit”*. * You may edit the video label to your favorite name. Press ↑ or ↓ to select alphanumeric characters for the label, then press ⊕.
“Color System”	select the color system. Press ↑ or ↓ to select either “Auto”, “PAL”, “SECAM”, “NTSC3.58” or “NTSC4.43”, then press ⊕. Normally, set this to “Auto”.
“Wake Up Timer Beep” (KV-BZ21M50 only)	allow your TV to emit beeping sound when TV switches on automatically using wake up timer. Press ↑ or ↓ to select “On”, then press ⊕. To cancel, select “Off”, then press ⊕.
“Factory Settings”	reset your TV to factory settings. Press ⊕ and press ↑ or ↓ to select “Yes”, then press ⊕. To cancel, select “No”, then press ⊕.

Notes

- The color system “SECAM” is available for KV-BZ21M50/BZ21M40/BZ14M40 only.
- To ensure the beeping sound can be heard, you must set an appropriate volume level on your TV and make sure the TV is not in mute condition.
- To stop the beeping sound, press any buttons on the remote control or top control panel.
- If no button is pressed for three minutes, the beeping sound will automatically go off.

■ Troubleshooting

If you find any problem while viewing your TV, you can either use the "Factory Settings" function or check the Troubleshooting guide below. If the problem persists, contact your Sony dealer.

"Factory Settings" function

Press the WEGA GATE button. Choose "Settings" and go to "Setup" (🔧) menu. From "Setup" menu, select "Factory Settings". Then select "Yes" and press ⊕. Your TV will go blank for a few seconds, then the "Initial Setup" menu will appear. Your TV will be set to factory settings, but certain problems may be solved.

Symptom	Solutions
Snowy picture, noisy sound	• Check the antenna cable and connection on the TV, VCR and at the wall (see page 8). • Check the antenna setup. Contact a Sony dealer for advice. • Display the "Channel Setup" menu and select "Manual Program" to preset the channel again (see page 17). • Display the "Channel Setup" menu and set the "Signal Booster" to "Auto" from "Manual Program" (see page 17). • Try using an external booster.
Distorted picture, noisy sound	• Turn off or disconnect the external booster if it is in use. • Display the "Channel Setup" menu and set the "Signal Booster" to "Off" from "Manual Program" (see page 17).
Good picture, noisy sound	• Display the "Channel Setup" menu and select the appropriate "TV System" from "Manual Program" (KV-BZ21M50/BZ21M40/BZ14M40 only) (see page 17).
No picture, no sound	• Check the power cord, antenna and VCR connections (see page 8). • Press I/⏻ (power) to turn on the TV (see page 10). • Press ⏻ (main power) on the TV to turn off the TV for about five seconds, then turn it on again (see page 7).
Good picture, no sound	• Press + to increase the volume level (see page 10). • Press 🔇 to cancel the muting (see page 10).
Dotted lines or stripes	• Do not use a hair dryer or other equipment near the TV. • Check the antenna setup. Contact a Sony dealer for advice.
Double images or "ghosts"	• Use a highly directional antenna. • Use the fine tuning ("Fine") function (see page 17). • Check the antenna setup. Contact a Sony dealer for advice. • Turn off or disconnect the external booster if it is in use.
No color	• Display the "Picture" menu and select "Custom" from "Picture Mode", then adjust the "Color" level from "Picture Adjustment" (see page 14). • Display the "Setup" menu and check the "Color System" setting (usually set this to "Auto") (see page 18). • Check the antenna setup. Contact a Sony dealer for advice.

continued

Troubleshooting (continued)

Symptom	Solutions
Picture slant	• Keep external speakers or other electrical equipment away from the TV.
Abnormal color patches	• Keep external speakers or other equipment away from the TV. Do not move the TV while the TV is turned on. Press ⏻ (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.
The ⏻ (standby) indicator on your TV flashes red several times after every three seconds.	• Count the number of times the ⏻ (standby) indicator flashes. Press ⏻ (main power) to turn off your TV. Contact your nearest Sony service center.
The TV screen sometimes goes blank for slightly longer than usual during channel change.	• The "Signal Booster" is functioning to detect a weak signal. This does not indicate a malfunction.
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, causing a noise. This does not indicate a malfunction.
A small "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.

警告

- 本電視機內存在危險性高電壓。
- 本電視機僅可在 110-240 伏特交流電壓下操作。
- 若未完成所有連接程序，請勿插入電源線；否則極少量的電流可能經天線或其它端子外泄。
- 若打算近期內不使用遙控器，請將電池取出，以避免電池泄漏而損壞遙控器。若您不小心觸及電池所泄漏的液體，應立即用水洗淨。



爲了個人安全起見，雷雨期間，請勿觸摸電視機的任何部份，包括電源線和天線電纜。

爲了兒童安全起見，請勿讓他們獨自逗留在電視機旁。千萬別讓兒童攀爬本電視機。

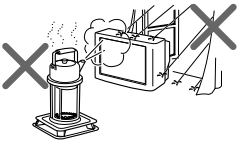

爲防止火災或觸電，請勿使本電視機被雨淋或受潮。

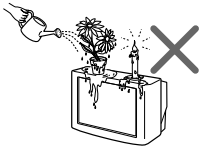

請勿放置任何物體於電視機上。請勿使任何液體滴濕或噴濕本電視機。請勿放置任何裝有液體的物體（如花瓶）於電視機上。

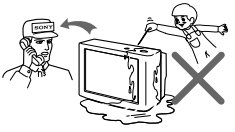

若有任何液體流入或固體落入本電視機內時，請勿操作本電視機。應立即請合格的專業人員檢查。



放置電視機於穩定的、並足以支撐電視機重量的電視支架及地面上。確保電視支架的表面平整且表面積寬於電視機底面。



請勿堵塞本電視機的通風口。請勿將本電視機放置於諸如書架或嵌入式壁櫥等封閉之處。

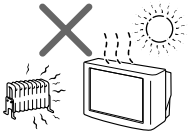

本電視機只適於家庭使用。請勿將本電視機放置於任何交通工具內或多塵、高溫、潮濕或震動頻繁之處。

請勿在同一電源插座上插入太多的電器。請勿損壞電源線。



請勿打開本電視機的機殼和後蓋，因爲電視機內存在高電壓和危險性部件。須由合格的專業人員對電視機進行檢修或棄置。



請用乾的軟布清潔本電視機。請勿使用汽油、稀釋劑或任何其它化學品清潔本電視機。請勿在電視機殼噴塗表面貼附任何物體（例如，貼紙，透明玻璃膠紙，膠合劑等）。請勿刮劃顯像管。



捏住插頭將電源線拔開。請勿直接拉拔電源線。即使電視機已斷開電源，但只要電源線還在插座內，它仍接通至交流電源。若想移動本電視機或打算近期內不使用本電視機時，請將電源線拔開。

目錄

準備工作 4
設定您的電視機 （“初始化设定”） 5
電視機頂部控制、前面和背後的控制板 7
連接選購的裝置 8
使用遙控器和基本功能 10
介紹 WEGA GATE 指示系統 12
“设定”調整 13
調整“图像设定” 14
調整“声音设定” 15
調整“频道设定” 16
調整“设定”菜單 18
故障檢修 19
規格 ..... 封底

CT

■ 準備工作

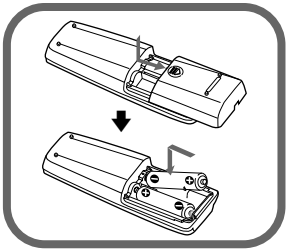

步驟 1

將所提供的電池裝入遙控器。

註

- 請勿使用舊電池或同時使用不同類型的電池。

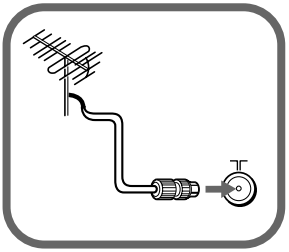

步驟 2

將天線電纜（未提供）連接至電視機背後的 ⊓（天線輸入）端子。

提示

- 您也可將本電視機連接至其它選購的裝置（參考第 8 頁）。

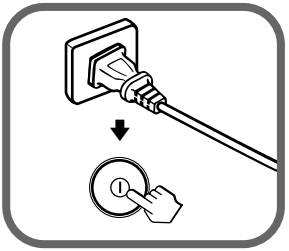

步驟 3

插入電源線，然後按壓電視機上的 ① 鍵以接通電視機的電源。

註

- 打開電視機時 ⏻（待機）指示燈將閃爍爲綠燈數秒鐘。這並不表示發生故障。

步驟 4

按照“Initial Setup”（“初始化设定”）菜單的指示以設定您的電視機（參考第 5 頁）。

■ 設定您的電視機（“初始化设定”）

當您第一次打開電視機時，“Initial Setup”（“初始化设定”）菜單將會顯示在屏幕上。您可用遙控器或電視機頂部控制板上的按鍵以改變菜單語言，自動預設電視頻道和排序或編輯頻道。

1 按壓 ↑ 或 ↓ 鍵以選擇所要的菜單語言，然後按壓 ⊕ 鍵。

被選擇的菜單語言將顯示在屏幕上。

2 按壓 ↑ 或 ↓ 鍵以選擇“是”，然後按壓 ⊕ 鍵以自動預設頻道。

屏幕將顯示自動預設頻道正在進行中（“电视系统”僅於 KV-BZ21M50/BZ21M40/BZ14M40）。

當所有可接收的頻道已被調諧和儲存後，“頻道排序/编辑”菜單將會自動顯示在屏幕上。

若要略掉自動預設頻道，選擇“否”，然後按壓 ⊕ 鍵。

如果出現“无信号。请连接有线信号线或天线”的訊息，請檢查您的電視連接，然後按壓 ⊕ 鍵。

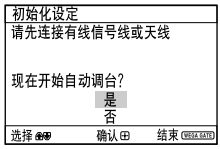

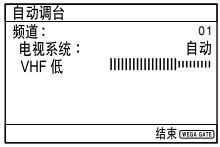

3 “频道排序/编辑”菜單可以讓您排序或編輯頻道。

a) 若您要保留當前頻道的狀態，按壓 WEGA GATE 鍵以退出。

b) 按壓 ↑ 或 ↓ 鍵以選擇您要改變的頻道號碼。被選定的頻道將會顯示在屏幕上。

c) 若您要改變頻道的順序：

1) 按壓 → 鍵以進入排序模式。

2) 按壓 ↑ 或 ↓ 鍵以選擇新的頻道位置，然後按壓 ← 鍵。

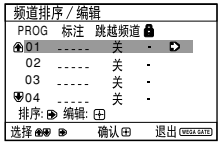

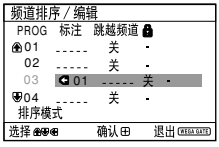

續

d) 若您要編輯頻道，按壓 ⊕ 鍵以改換成編輯模式。

按壓 → 鍵直到您要編輯的模式被選中：
標註、跳越頻道、🔒（鎖定符號）。
然後按壓 ⊕ 鍵。

1) 若要標註，按壓 ↑ 或 ↓ 鍵以選擇英文、數字、字符進行標註。然後按壓 ⊕ 鍵。

2) 若要跳越頻道號碼，按壓 ↑ 或 ↓ 鍵以選擇“开”。然後按壓 ⊕ 鍵。
當您在使用 PROG +/– 鍵時，您可跳越此頻道號碼。

3) 若要鎖定不要的頻道號碼，按壓 ↑ 或 ↓ 鍵以選擇 🔒。然後按壓 ⊕ 鍵。

e) 若您要改變其他頻道，請重復 b) 至 d) 的步驟。

按壓 WEGA GATE 鍵以進入下個菜單。

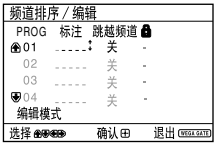

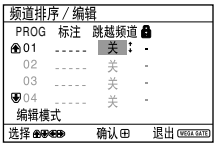

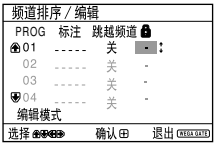

4 若要防止“初始化设定”菜單在按壓 ⏻ 鍵打開電視機時再次顯示在屏幕上，則按壓 ↑ 或 ↓ 鍵以選擇“否”，然後按壓 ⊕ 鍵。

若要這菜單再次顯示在屏幕上，選擇“是”，然後按壓 ⊕ 鍵。

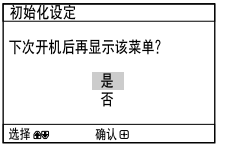

提示

- 您可按壓 WEGA GATE 鍵以進入“初始化设定”菜單最後的設定項目。

■ 電視機頂部控制，前面和背後的控制板

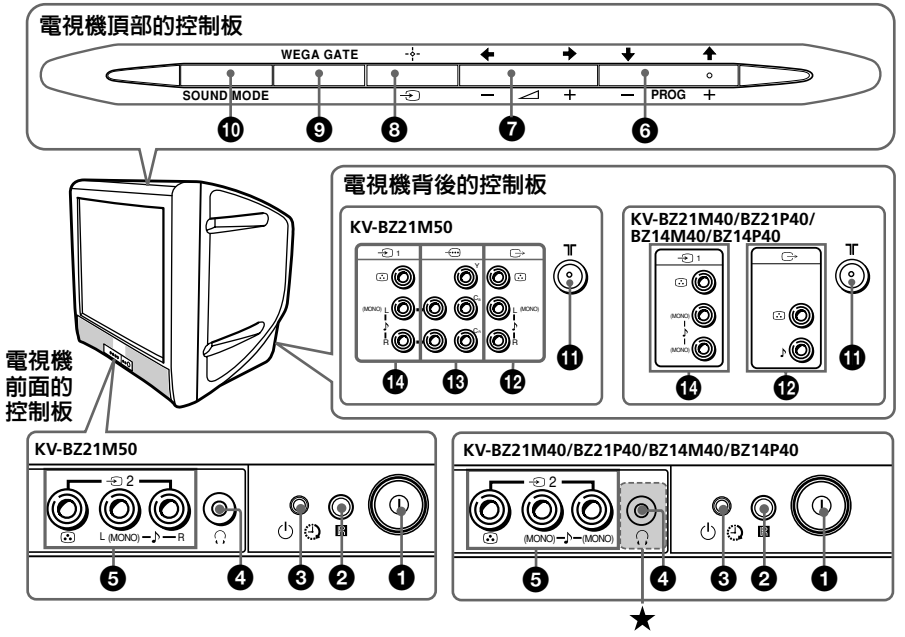

按鍵 / 端子	功能	頁面
❶ ⏻	打開或關閉電視機。	4
❷	遙控傳感器。	–
❸	喚醒指示燈。	11
❸	待機指示燈。	4
❹	耳機插口。	–
❺ 2	視頻輸入端子 2。	8
❻ PROG +/–	選擇頻道號碼。	–
❼ +/–	調整音量。	–
❽	選擇電視或視頻輸入。	8
WEGA GATE 菜單操作		
❻, ❼ ↑,↓,←,→	選擇和調整項目。	12
❽	確認被選項目。	12
❾ WEGA GATE	顯示或取消 WEGA GATE 菜單。	12
❿ SOUND MODE （僅於 KV-BZ21M50）	以 "5-Band Graphic Equalizer" 顯示選擇聲音模式選項。	10
⓫	天線輸入端子。	8
⓬	監視器輸出端子。	8
⓭	DVD 分量信號輸入端子。	9
⓮ 1	視頻輸入端子 1。	8

★ 耳機插口將被標註爲 且僅限於 KV-BZ14。

■ 連接選購的裝置

連接至視頻輸入端子（⇨）

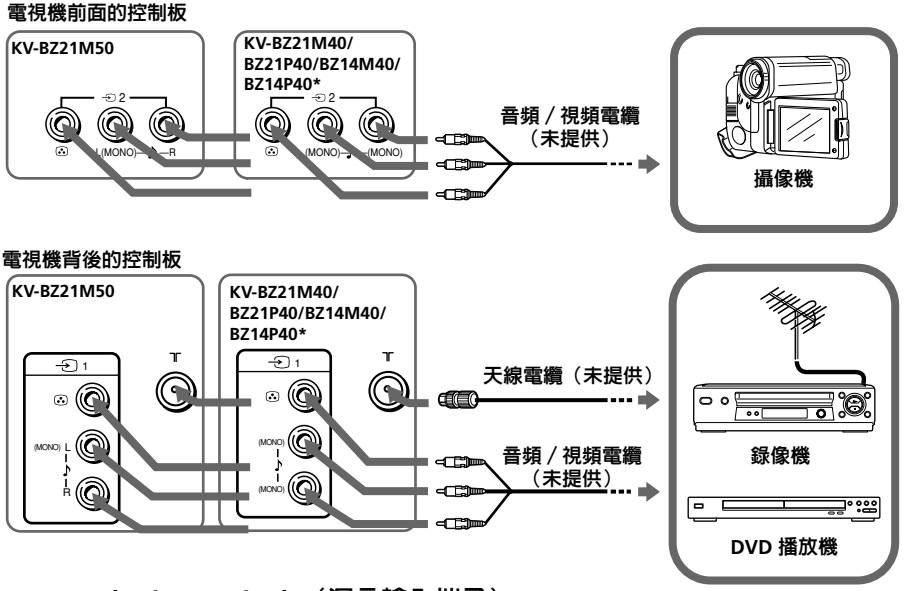

* “Sound Mix Terminal”（混音輸入端子）
(僅於 KV-BZ21M40/BZ21P40/BZ14M40/BZ14P40)

您可將音頻裝置的音頻左及右插口連接至電視機上的兩個 ♪（MONO）插口以享受混合左及右音響。若您不要混合音響，請斷開其中一個 ♪（MONO）插口。

註

- 若將錄像機連接至 ⅂（天線輸入）端子，請將錄像機輸出的信號預設至電視機上的頻道號碼 “0”（參考第 17 頁）。

連接至監視器輸出端子（⇨）

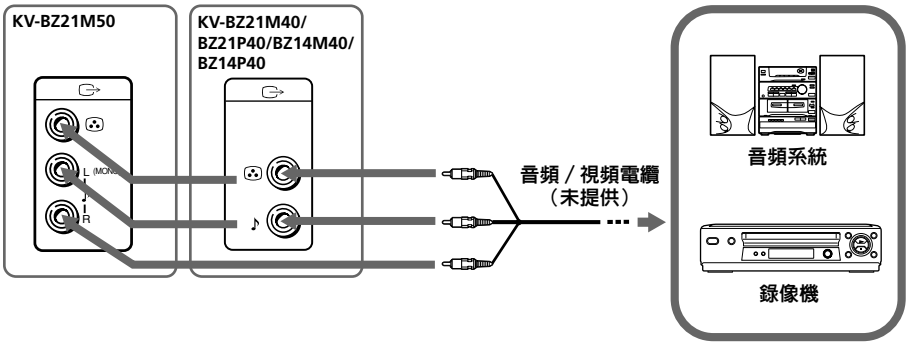

連接至 DVD 分量信號輸入端子（⇢）

▶ 僅於 KV-BZ21M50

電視機背後的控制板

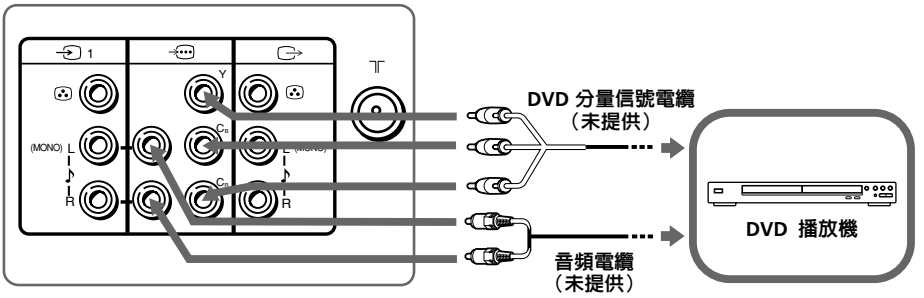

註

- 當連接 DVD 播放機至電視機上的 ⇢（分量信號輸入端子）時，若您的 DVD 播放機可輸出隔行和逐行的掃描模式信號，則請選擇隔行掃描輸出。您的電視機可接收 525i/60 赫茲或 625i/50 赫茲的隔行掃描信號。
- 某些 DVD 播放機的插口可能標記爲 Y/C_B/C_R, Y/P_B/P_R, Y/C_b/C_r 或 Y/B-Y/R-Y。
- 若您在電視屏幕上選擇“DVD”，⇨（監視器輸出）將不能輸出正常的信號。這並不表示發生故障。

■ 使用遙控器和基本功能

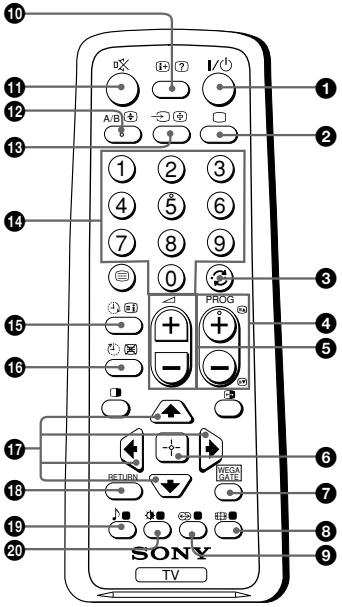

按鍵	說明	頁面
❶ I/⏻	打開或關閉電視機。	–
❷ ▭	顯示電視節目。	–
❸ ↻	跳回到之前收看至少五秒的頻道號碼。	–
❹ **PROG +/–**	選擇頻道號碼。	–
❺ **+/–**	調整音量。	–
❽	本電視機無此操作。	–
❾ （僅於 **KV-BZ21M50**）	選擇環繞聲模式：“开”，“模拟立体声”，“关”。	15
❿	顯示屏幕上的信息。	–
⓫	消除聲音。	–
⓭	選擇電視或視頻輸入。	8
⓮ **0-9**	輸入數字鍵。	–
⓳ ♪ （僅於 **KV-BZ21M50**） 	以 “5-Band Graphic Equalizer” 顯示選擇聲音模式選項：“动态”，“标准”，“用户设定”*。 * 當選擇“用户设定”模式時，您可接收到最終在菜單里的“声音用户设定”選項中所調整的音響設定。	15
⓴	選擇圖像模式選項：“动态”，“标准”，“用户设定”*。 * 當選擇“用户设定”模式時，您可接收到最終在菜單里的“图像用户设定”選項中所調整的圖像設定。	14

按鍵	說明	頁面
WEGA GATE 菜單操作		
❻ ⊕	確認被選項目。	12
❼ **WEGA GATE**	顯示或取消 WEGA GATE 菜單。	
⓱ ↑, ↓, ←, →	選擇和調整項目。	
⓲ **RETURN**	回到之前的階段。	
定時器操作		
⓯ ◴ **（喚醒定時器）**	依照您所要的時間設定電視以自動打開（最多12 小時）。 一旦你已設定喚醒定時，電視機上的 ◴ 指示燈將亮起黃褐色。 用喚醒定時接通電視機電源並超過一小時後，若您不按壓電視機或遙控器上的任何一個按鍵或控制鍵，則電視機再進入待機狀態。	–
⓰ ◴ **（睡眠定時器）**	依照您所要的時間設定電視以自動關閉（最多 1 小時 30 分鐘）。	–
圖文電視操作（綠色標記）		
☰, ⓘ, ⊕, ⊠, ?, ⊕, ▲, ▼, ■ **（紅色，綠色，黃色，藍色）**	本電視機無此操作。	–
畫中畫操作		
◨, ⇆, ↑, ↓, ←, →	本電視機無此操作。	–
立體聲或雙語言操作		
⓬ A/B	本電視機無此操作。	–

■ 介紹 WEGA GATE 指示系統

WEGA GATE 是個允許您進入預設電視頻道，已連接的外接輸入和“设定”菜單的通道。

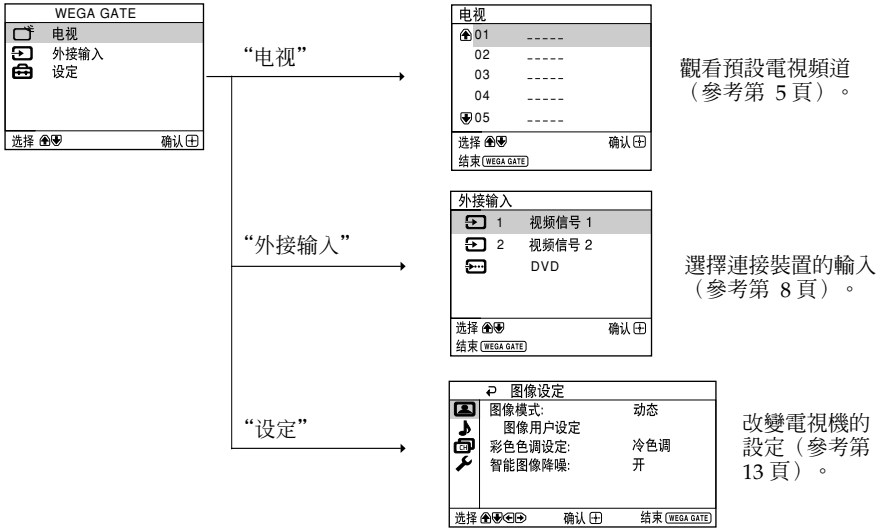

如何使用 WEGA GATE 菜單

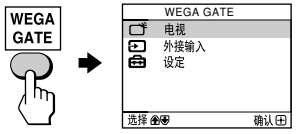

(1) 按壓 WEGA GATE 鍵以顯示或取消 WEGA GATE 菜單。

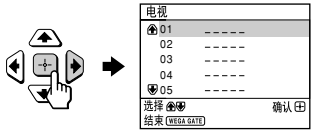

(2) 按壓 ⊕ 鍵（或 → 鍵）以確定您所選的項目或進入下一個階段的菜單。

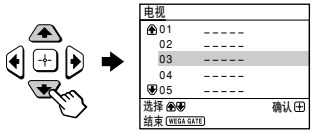

(3) 按壓 ↑ 或 ↓ 鍵以選擇所要的項目。

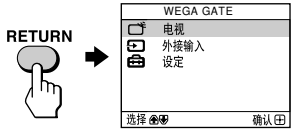

(4) 按壓 RETURN 鍵以回到之前的階段。

提示

- 頂部控制板上的 WEGA GATE 鍵，⊕ 鍵和 ↑,↓,←,→ 鍵也可用於上述操作。

■ “设定”調整

您可在 WEGA GATE 菜單里的“设定”改變電視機的設定。
按壓 WEGA GATE 鍵以顯示 WEGA GATE 菜單。按壓 ↑ 或 ↓ 鍵以選擇“设定”，然後按壓 ⊕ 鍵。

以下是可以被調整項目的總概況。

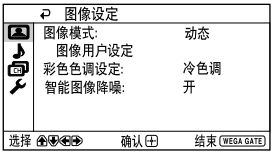

“图像设定” （參考第 14 頁）
“图像模式”：“动态” → “标准” → “用户设定”
“图像用户设定”：“对比度”，“亮度”，“颜色”，“色调”，“锐度”，“重新设定”
“彩色色调设定”：“冷色调” → “自然色调” → “暖色调”
“智能图像降噪”：“开” → “关”

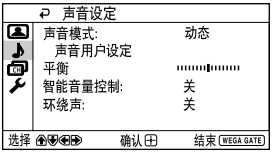

“声音设定” （參考第 15 頁）
“声音模式”：“动态” → “标准” → “用户设定”（僅於 KV-BZ21M50）
“声音用户设定”：“设定”，“重新设定”（僅於 KV-BZ21M50）
“平衡”（僅於 KV-BZ21M50）
“智能音量控制”：“开” → “关”
“环绕声”：“开” → “模拟立体声” → “关”（僅於 KV-BZ21M50）

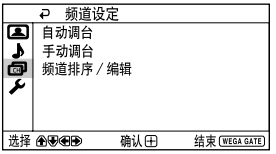

“频道设定” （參考第 16 頁）
“自动调台”
“手动调台”
“频道”：“00” – “99”
“电视系统”：“B/G” → “I” → “D/K” → “M”（僅於 KV-BZ21M50/BZ21M40/BZ14M40）
“VHF 低” / “VHF 高” / “UHF”
“微调”：“自动” → “手动”
“信号增强”：“自动” → “关”
“频道排序/编辑”

“设定” （參考第 18 頁）
“语言/Language”：“English”（英文）→ “中文”
“视频输入标注”：“视频输入”，“标注”
“彩色制式”：“自动” → “PAL” → “SECAM”* → “NTSC3.58” → “NTSC4.43”
“唤醒鸣叫声设定”：“开” → “关”（僅於 KV-BZ21M50）
“出厂设定”：“是” → “否”
* 僅有 KV-BZ21M50/BZ21M40/BZ14M40 可讓您使用“SECAM”的彩色制式。

註
- 當菜單顯示的功能呈暗淡色，您將無法選擇此功能。

■ 調整“图像设定”

“图像设定”菜單可使您調整圖像設定。

1 **按壓 WEGA GATE 鍵並選擇“设定”。**

2 **確認“图像设定”符號（）已被選擇，然後按壓 鍵。**

3 **按壓 ↑ 或 ↓ 鍵以選擇所要的項目（例如，“图像模式”），然後按壓 鍵。**

選擇	以
“图像模式”	選擇“动态”（對比和銳度）、“标准”（普通）或“用户设定”*。
“彩色色调设定”	調整白色色澤。 選擇“冷色调”（藍色澤）、“自然色调”（自然色澤）或“暖色调”（紅色澤）。
“智能图像降噪”	接收最理想的圖像效果。 按壓 ↑ 或 ↓ 鍵以選擇“开”，然後按壓 鍵。 要取消時，選擇“关”然後按壓 鍵。

* 僅當“用户设定”模式被選取時方可隨個人喜好調整“图像用户设定”和“彩色色调设定”選項中的設定。

調整“用户设定”模式下的“图像用户设定”項目

1 **按壓 ↑ 或 ↓ 鍵以選擇“对比度”、“亮度”、“颜色”、“色调”（顏色深淺）或“锐度”，然後按壓 鍵。**

選擇“重新设定”將會使電視機恢復到工廠設定。

2 **按壓 ↑，↓，← 或 → 鍵以調整您所選項目的設定，然後按壓 鍵。**

3 **重復上述步驟以調整其它項目。**

當選擇“用户设定”項目時，您可接收已被調整的設定。

註

- 只有當彩色制式爲 NTSC 時，您才能調整“色调”設定。
- 您也可減少“锐度”以降低圖像噪音。

■ 調整“声音设定”

“声音设定”菜單可使您調整音響設定。

1 **按壓 WEGA GATE 鍵並選擇“设定”。**

2 **按壓 ↑ 或 ↓ 鍵以選擇“声音设定”符號（♪），然後按壓 ⊕ 鍵。**

3 **按壓 ↑ 或 ↓ 鍵以選擇所要的項目（例如，“声音模式”），然後按壓 ⊕ 鍵。**

選擇	以
“声音模式” （僅於 KV-BZ21M50）	選擇“动态”（低和高音調）、“标准”（人聲和高音調）或“用户设定”*。
“平衡” （僅於 KV-BZ21M50）	按壓 ↓ 或 ← 鍵以強調左揚聲器。 按壓 ↑ 或 → 鍵以強調右揚聲器。
“智能音量控制”	自動調整所有頻道號碼和視頻輸入的音量。 按壓 ↑ 或 ↓ 鍵以選擇“开”，然後按壓 ⊕ 鍵。 要取消時，選擇“关”，然後按壓 ⊕ 鍵。
“环绕声” （僅於 KV-BZ21M50）	選擇“开”（環繞聲）、“模拟立体声”（模擬立體聲的單聲道）或“关”。

* 僅當“用户设定”模式被選取時方可隨個人喜好調整“声音用户设定”選項中的設定。

調整“用户设定”模式下的“声音用户设定”項目（僅於 KV-BZ21M50）

“5-Band Graphic Equalizer”（5 波段互動音響均衡器）可使您在菜單上的“用户设定”模式調整聲音頻率設定。

1 **確認“设定”已被選定，然後按壓 ⊕ 鍵。**

選擇“重新设定”將會使電視機恢復到工廠設定。

2 **按壓 ← 或 → 鍵以選擇所要的聲音頻率，然後按壓 ↑ 或 ↓ 鍵以調整設定再按壓 ⊕ 鍵。**

當選擇“用户设定”模式時，您可接收已被調整的設定。

註

- 調整高頻率將影響高音調聲音，調整低頻率將影響低音調聲音。
- 您可直接用頂部控制板的 SOUND MODE 鍵（參考第 7 頁）或按壓遙控器上的 ♪ 鍵（參考第 10 頁）以顯示設定。

■ 調整“频道设定”

“频道设定”菜單可使您自動預設頻道，手動預設頻道和排序或編輯頻道。

1 **按壓 WEGA GATE 鍵並選擇“设定”。**

2 **按壓 ↑ 或 ↓ 鍵以選擇“频道设定”符號（CH），然後按壓 ⊕ 鍵。**

3 **按壓 ↑ 或 ↓ 鍵以選擇所要的項目（例如，“自动调台”），然後按壓 ⊕ 鍵。**

選擇	**以**
“自动调台”	自動預設頻道。
“手动调台”	手動預設所要的頻道及不能自動預設的頻道（參考第 17 頁的**手動預設頻道**）。
“频道排序/编辑”	改變顯示在屏幕上的頻道順序，標註頻道號碼，跳越頻道號碼和鎖定不要的頻道。 （參考第 5 頁的“初始化设定”的步驟 3）。

註

- 若您預設一個鎖定的頻道號碼，該頻道號碼將自動解鎖。
- 若您排序一個鎖定的頻道，該頻道將保留在鎖定狀態。

手動預設頻道

1 **在選擇“手动调台”之後，選擇您要預設頻道的頻道號碼。**

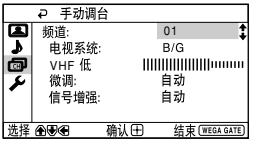

(1) 確認“频道”已被選定，然後按壓 ⊕ 鍵。

(2) 按壓 ▲ 或 ▼ 鍵直到您要預設的頻道號碼顯示在荣單上，然後按壓 ⊕ 鍵。

2 **選擇所要的頻道。**

(1) 確認“VHF 低”、“VHF 高”或“UHF”已被選定，然後按壓 ⊕ 鍵。

(2) 按壓 ▲ 或 ▼ 鍵直到您所要的頻道顯示在電視屏幕上，然後按壓 ⊕ 鍵。

3 **若所要頻道的聲音失真，則請選擇適當的電視系統（僅於 KV-BZ21M50/BZ21M40/BZ14M40）。**

(1) 按壓 ▲ 或 ▼ 鍵以選擇“电视系统”，然後按壓 ⊕ 鍵。

(2) 按壓 ▲ 或 ▼ 鍵直到聲音正常爲止，然後按壓 ⊕ 鍵。

4 **若您不滿意圖像和聲音質量，您可用“微调”來改善它。**

(1) 按壓 ▲ 或 ▼ 鍵以選擇“微调”，然後按壓 ⊕ 鍵。
(2) 按壓 ▲ 或 ▼ 鍵以選擇“手动”，然後按壓 ⊕ 鍵。
(3) 按壓 ▲, ▼, ◀ 或 ▶ 鍵直到圖像和聲音最佳，然後按壓 ⊕ 鍵。

荣單上的 + 或 – 符號將會在調諧時閃爍。

5 **若電視信號太強（圖像失真；圖像有線條；信號干擾）或微弱（圖像有雪花狀斑點），您可設定“信号增强”以改善圖像質量。**

(1) 按壓 ▲ 或 ▼ 鍵以選擇“信号增强”，然後按壓 ⊕ 鍵。

(2) 按壓 ▲ 或 ▼ 鍵以選擇“关”（適用於圖像失眞；圖像有線條；信號干擾）或“自动”（適用於圖像有雪花狀斑點），然後按壓 ⊕ 鍵。

■ 調整“设定”菜單

“设定”菜單可使您更換菜單語言，標註所連接的裝置，選擇彩色制式，設定喚醒鳴叫聲和使電視機恢復到工廠設定。

1 **按壓 WEGA GATE 鍵並選擇“设定”。**

2 **按壓 ↑ 或 ↓ 鍵以選擇“设定”符號（🔧），然後按壓 ⊕ 鍵。**

3 **按壓 ↑ 或 ↓ 鍵以選擇所要的項目（例如，“语言/Language”），然後按壓 ⊕ 鍵。**

選擇	以
“语言/Language”	更換菜單語言。 按壓 ↑ 或 ↓ 鍵以選擇“English”（英文）或“中文，然後按壓 ⊕ 鍵。
“视频输入标注”	標註所連接的裝置。 (1) 選擇“视频输入”並按壓 ⊕ 鍵。 按壓 ↑ 或 ↓ 鍵以選擇您要標註的輸入，然後按壓 ⊕ 鍵。 (2) 選擇“标注”並按壓 ⊕ 鍵，然後按壓 ↑ 或 ↓ 鍵以選擇標註選項：“视频信号 1”/“视频信号 2”/“DVD”（僅於 KV-BZ21M50）、“录像机”、“卫星节目”、“游戏机”或“编辑”*。 * 您可用喜愛的名稱編輯視頻輸入標註。按壓 ↑ 或 ↓ 鍵以選擇英文、數字、字符進行標註，然後按壓 ⊕ 鍵。
“彩色制式”	改變彩色制式。 按壓 ↑ 或 ↓ 鍵以選擇“自动”、“PAL”、“SECAM”、“NTSC 3.58”或“NTSC 4.43”，然後按壓 ⊕ 鍵。 通常將此設定爲“自动”。
“喚醒鳴叫声设定” （僅於 KV-BZ21M50）	使您的電視機在使用喚醒定時自動打開時發出鳴叫聲。 按壓 ↑ 或 ↓ 鍵以選擇“开”，然後按壓 ⊕ 鍵。 要取消時，選擇“关”，然後按壓 ⊕ 鍵。
“出厂设定”	使電視機恢復到工廠設定。 按壓 ⊕ 鍵後再按壓 ↑ 或 ↓ 鍵以選擇“是”，然後按壓 ⊕ 鍵。 要取消時，選擇“否”，然後按壓 ⊕ 鍵。

註

- 僅有 KV-BZ21M50/BZ21M40/BZ14M40 可讓您使用“SECAM”彩色制式。
- 想要確保能聽得到鳴叫聲，您必須先設定一個適當的音量並確定電視機不是處於靜音狀態。
- 若要鳴叫聲停止，按壓頂部控制板或遙控器上的任何一個按鍵即可。
- 若三分鐘後沒有按壓任何按鍵，鳴叫聲將會自動停止。

■ 故障檢修

若在觀看電視時遇見任何問題，您可使用“出厂设定”功能以解決問題或參考下列故障檢修指南。若問題仍然存在，請聯絡 Sony 經銷商。

“出厂设定”功能

按壓 WEGA GATE 鍵，選擇“设定”(“Settings”) 後進入“设定”(“Setup”)（🔧）菜單。從“设定”菜單里選擇“出厂设定”。然後選擇“是”並按壓 ⊕ 鍵。電視屏幕即呈現空白，約數秒後，“初始化设定”菜單將會顯示在電視屏幕上。您的電視機將恢復到工廠設定，但一些電視故障可能會消失。

癥狀	解決方法
圖像有雪花狀斑點，有噪聲	• 檢查天線電纜以及電視機，錄像機和牆上的天線連接是否正確（參考第 8 頁）。 • 檢查天線的裝置。請尋求 Sony 經銷商的協助。 • 顯示“频道设定”菜單並選擇“手动调台”以再次預設頻道（參考第 17 頁）。 • 顯示“频道设定”菜單並選擇“手动调台”裡的“信号增强”爲“自动”（參考第 17 頁）。 • 嘗試使用外部信號增強器。
圖像失真，有噪聲	• 切斷外部信號增強器的電源或拔掉其插頭以終止其操作。 • 顯示“频道设定”菜單並選擇“手动调台”裡的“信号增强”爲“关”（參考第 17 頁）。
圖像良好，有噪聲	• 顯示“频道设定”菜單並在“手动调台”裡選擇適當的“电视系统”（僅於 KV-BZ21M50/BZ21M40/BZ14M40）（參考第 17 頁）。
沒有圖像，沒有聲音	• 檢查電源線，天線和錄像機之連接是否正確（參考第 8 頁）。 • 按壓 I/⏻（電源）鍵以接通電視機的電源（參考第 10 頁）。 • 按壓電視機上的 ⏻（主電源）鍵以切斷電視機的電源，五秒左右後再次接通電源（參考第 7 頁）。
圖像良好，沒有聲音	• 按壓 ◿ + 鍵以提高音量水平（參考第 10 頁）。 • 按壓 🔇 鍵以取消靜音（參考第 10 頁）。
圖像有點線或條紋	• 不要在電視機旁使用吹風機或其它設備。 • 檢查天線的裝置。請尋求 Sony 經銷商的協助。
圖像出現雙重影像	• 使用高定向天線。 • 使用“微调”功能（參考第 17 頁）。 • 檢查天線的裝置。請尋求 Sony 經銷商的協助。 • 切斷外部信號增強器的電源或拔掉其插頭以終止其操作。
圖像無彩色	• 顯示“图像设定”菜單並選擇“图像模式”裡的“用户设定”，然後調整“图像用户设定”裡的“颜色”水平（參考第 14 頁）。 • 顯示“设定”菜單及檢查“彩色制式”設定（一般將此設定爲“自动”）（參考第 18 頁）。 • 檢查天線的裝置。請尋求 Sony 經銷商的協助。

續

故障檢修（續）

癥狀	解決方法
圖像傾斜	• 將外部揚聲器或其它電器放置在離電視機較遠的地方。
圖樣出現反常彩色斑點	• 將外部揚聲器或其它電器放置在離電視機較遠的地方。請別在電視機打開時進行搬移。按壓電視機上的 ⏻（主電源）鍵以切斷電視機的電源，約 15 分鐘後再將其打開以使電視機消磁。
電視機上的 ⏻（待機）指示燈每隔三秒閃爍至少一次的紅色亮光。	• 計算 ⏻（待機）指示燈的亮光次數。按壓 ⏻（主電源）鍵以切斷電視機的電源。通知您鄰近的 Sony 維修服務中心。
電視屏幕有時會在更換頻道時呈顯空白，空白時間比一般略長。	• “信号增强”正在操作以探測微弱的信號。這並不表示發生故障。
電視機外殼吱嘎聲。	• 室溫的變化有時會導致電視機的外殼膨脹或縮小，因此產生噪聲。這並不表示發生故障。
當您接通電視機時，聽到“嘣”的聲音。	• 電視機自動消磁。這並不表示發生故障。

■ Specifications

	KV-BZ21M50 KV-BZ21M40 KV-BZ21P40	KV-BZ14M40 KV-BZ14P40	Note
Power requirements	110-240 V AC, 50/60 Hz		
Power consumption (W)	Indicated on the rear of the TV		
Television system	B/G, I, D/K, M		
	B/G		KV-BZ21P40/ BZ14P40 only
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43		
	PAL, PAL 60, NTSC3.58 (AV IN), NTSC4.43		KV-BZ21P40/ BZ14P40 only
Channel coverage **B/G**	VHF : E2 to E12 /UHF : E21 to E69 / CATV : S01 to S03, S1 to S41		
I	UHF : B21 to B68 /CATV : S01 to S03, S1 to S41		KV-BZ21M50/ BZ21M40/ BZ14M40 only
D/K	VHF : C1 to C12, R1 to R12 / UHF : C13 to C57, R21 to R60 / CATV : S01 to S03, S1 to S41, Z1 to Z39		
M	VHF : A2 to A13 /UHF : A14 to A79 / CATV : A-8 to A-2, A to W+4, W+6 to W+84		
(Antenna)	75-ohm external terminal		
Audio output (Speaker)	3 W + 3 W	3 W	
Number of terminal **(Video)**	Input: 2 Output: 1	Phono jacks; 1 Vp-p, 75 ohms	
(Audio)	Input: 3 Output: 1	Phono jacks; 500 mVrms	KV-BZ21M50 only
	Input: 2 Output: 1	Phono jacks; 500 mVrms	KV-BZ21M40/ BZ21P40/ BZ14M40/ BZ14P40 only
(Component Video)	Input: 1	Phono jacks; Y: 1 Vp-p, 75 ohms, sync negative C_B: 0.7 Vp-p, 75 ohms C_R: 0.7 Vp-p, 75 ohms	KV-BZ21M50 only
(Headphone)	Output: 1	Stereo minijack	KV-BZ21M50/ BZ21M40/ BZ21P40 only
(Earphone)	Output: 1	Monaural minijack	KV-BZ14M40/ BZ14P40 only
Picture tube	21 in.	14 in.	
Tube size (cm)	54	37	Measured diagonally
Screen size (cm)	51	34	Measured diagonally
Dimensions (w/h/d, mm)	497 × 468 × 494	374 × 360 × 431	
Mass (kg)	23	12	

Design and specifications are subject to change without notice.